


Time for Building Techniques

Example: small and medium enterprises

Network synchronisation

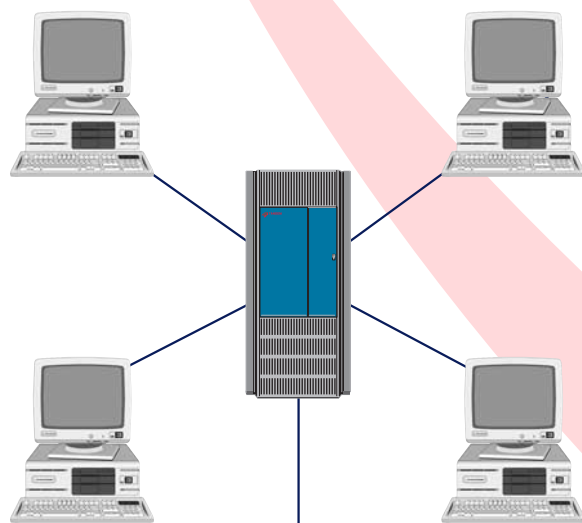


RS 232

Master Clock Center
CompuTime Center CTC

DCF 77


Clock control:
conventional

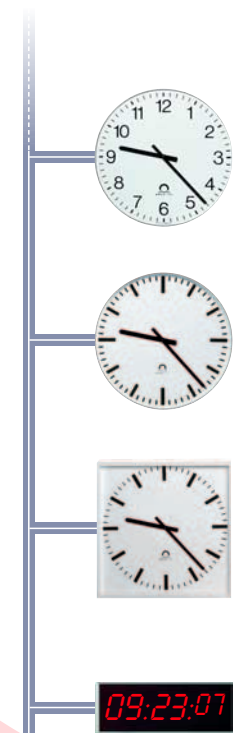

Impulse line

MOBALine

Bus-system:
self-setting

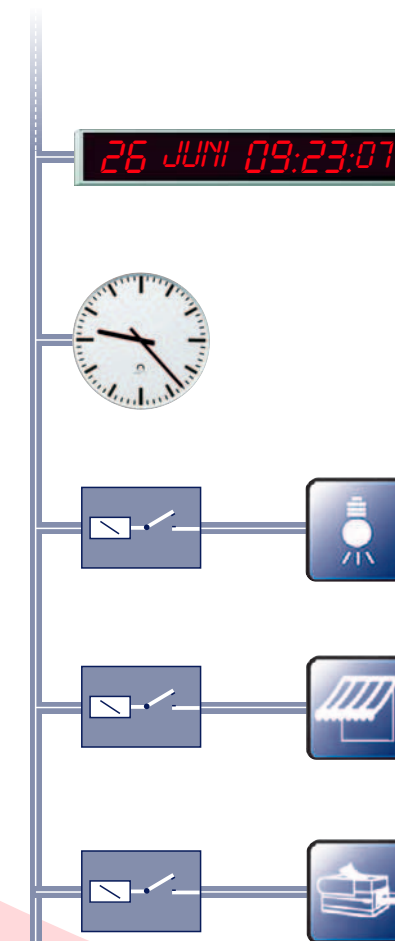

Universal time management system for control of clocks, network synchronisation and automation of building technical systems.